



```
avrdude -p m328p -c linuxspi -P /dev/spidev0.0 -U flash:w:build-cli/MYBUILD.hex  
avrdude -p m328p -c linuxspi -P /dev/spidev0.0 -U lfuse:w:0xFF:m -U hfuse:w:0xDE:m -U efuse:w:0x05:m
```

```
/etc/avrdude.conf  
programmer  
  id = "linuxspi";  
  desc = "Use Linux SPI device in /dev/spidev*";  
  type = "linuxspi";  
  reset = 25;  
  baudrate=100000;  
;  
#spi_bcm2835 !!  
Makefile:  
ARDUINO_DIR = /usr/share/arduino  
BOARD_TAG = uno  
ARDUINO_PORT = /dev/ttyAMA0  
ARDUINO_LIBS = include /usr/share/arduino/Arduino.mk
```